

Operating Instructions

**Model:
JG STAT2/TS/V3**

10/09 Revision 1

Ref: JGSTAT2/TS/V3



===== *the nation's favourite for* =====

PLUMBING & HEATING SUPPLIES

✓ **FREE SHIPPING**
on all orders over £100 to mainland UK

✓ **SECURE PAYMENTS**
shop online with confidence

✓ **FINANCE AVAILABLE**
spread the cost with low interest rates

✓ **PRICE MATCH**
always get the best deals available

----- we have -----

H U G E R E D U C T I O N S ON THOUSANDS OF ITEMS

Boilers

Radiators

Heating controls

Pipes & fittings

Cylinders

Fires

Renewable energy

Bathroom suites

Kitchen sinks & taps

Showers

Wet rooms

Towel warmers

Bathroom furniture

& much more

visit our website

plumbnation.co.uk

CALL US ON

0 8 4 4 8 0 0 3 4 6 0

Contents Page

Display Symbols Explained	5
Temperature Display	8
Setting the Clock	8
Comfort Levels Explained	9
Locking the Keypad	12
Temperature Override	12
Temperature Hold	13
Holiday	14
Heat On/Off	15
Clean Screen	15
Factory Reset	16
Optional Feature Setup	17-22
Wiring Diagram	23

What is a programmable room thermostat?

A programmable room thermostat is both a programmer and a room thermostat. A programmer allows you to set “On” and “Off” time periods to suit your own lifestyle. A room thermostat works by sensing the air temperature, switching on the heating when the air temperature falls below the thermostat setting, and switching it off once this set temperature has been reached.

So, a programmable room thermostat lets you choose what times you want the heating to be on, and what temperature it should reach while it is on. It will allow you to select different temperatures in your home at different times of the day (and days of the week) to meet your particular needs.

Turning a programmable room thermostat to a higher setting will not make the room heat up any faster. How quickly the room heats up depends on the design of the heating system, for example, the size of the boiler and radiators.

Neither does the setting affect how quickly the room cools

down. Turning a programmable room thermostat to a lower setting will result in the room being controlled at a lower temperature, and saves energy.

The way to set and use your programmable room thermostat is to find the lowest temperature settings that you are comfortable with at the different times you have chosen, and then leave it alone to do its job.

The best way to do this is to set low temperatures first, say 18°C, and then turn them up by one degree each day until you are comfortable with the temperatures. You won't have to adjust the thermostat further. Any adjustment above these setting will waste energy and cost you more money.




If your heating system is a boiler with radiators, there will usually be only one programmable room thermostat to control the whole house. But you can have different temperatures in individual rooms by installing thermostatic radiator valves (TRVs) on individual radiators. If you don't have TRVs, you should choose a temperature that is reasonable for the whole house. If you do have TRVs, you

can choose a slightly higher setting to make sure that even the coldest room is comfortable, then prevent any overheating in other rooms by adjusting the TRVs. The time on the programmer must be correct. Some types have to be adjusted in spring and autumn at the changes between Greenwich Mean Time and British Summer Time.

You may be able to temporarily adjust the heating programme, for example, “Override”, “Advance” or “Boost”. These are explained in the manufacturer’s instructions.

Programmable room thermostats need a free flow of air to sense the temperature, so they must not be covered by curtains or blocked by furniture. Nearby electric fires, televisions, wall or table lamps may prevent the thermostat from working properly.

Display Symbols Explained

Symbol	Description
	Heat On Icon <i>Shown when the heating is On Flashing when the optimum start is in operation.</i>
	Frost On Icon (Heating Off) <i>Shown when the heating is switched off and is protecting against frost only</i>
	Keylock Icon <i>Shown when the keypad is locked</i>

Installation Procedure

DO's

1. Do mount the thermostat at eye level.
2. Do read the instructions fully so that you get the best from our product.

DON'Ts

1. Do not install near a direct heat source as this will affect the workings of the thermostat.
2. Do not push hard on the LCD otherwise you will damage the liquid crystal display and this is not repairable.

Installation

The thermostat is designed to be flush mount, a back box of 35mm should have been sunk in the wall prior to installation.

Step 1

Carefully separate the front half of the thermostat from the back plate by placing a small flat head terminal driver in to the slots on the bottom face of the thermostat.

Step 2

Carefully unplug the ribbon connector which is plugged in to the front half of the thermostat.

Place the thermostat front half somewhere safe.

Terminate the thermostat as shown in the diagrams at the back of this booklet.

Screw the thermostat back plate on to the back box.

Step 3

Re-connect the thermostat ribbon cable and clip the two halves together.

Temperature Display



The JGSTAT2/TS/V3 provides control of 2 zones. The zone selected is underlined, you can select a different zone by pressing Zone 1 or Zone 2.

Room Temp = This is the current room temperature.

SET = This is the temperature you are trying to achieve in your home.

Setting The Clock

To set the clock in your thermostat, follow the steps below:

- With the thermostat turned on, press PROG.
- Press Clock.
- Use   to set the correct Time.
- Press Day to set the correct Day.
- Press Done to accept and store.

Comfort Levels Explained

Comfort levels allow you to set different temperatures throughout the day. For example, you may want the home warm in the morning when you are getting ready for work, cooler during the day when the house is unoccupied and then warmer in the evening when you are home relaxing. The thermostat offers 5/2 Day Programming (4 levels for the weekday, 4 for the weekend) and 7 day Programming (4 levels for each day). See pages 17-22 for details on how to switch between these modes.

Tip! If you don't want to use all of the comfort levels, just set the time to --.— and the thermostat will ignore this setting.

Factory Programmed Comfort Levels

The following comfort levels are programmed already, however you can change them easily.





Weekday Level

	Time	Temp
Wake	08.00	21°C
Leave	09.30	16°C
Return	16.30	22°C
Sleep	23.00	17°C

Weekend Level


	Time	Temp
Wake	09.00	21°C
Leave	22.00	16°C
Return	--.--	--°C
Sleep	--.--	--°C

Changing the Comfort Levels



- Select the Zone you wish to alter, the zone selected will be underlined.
- Press PROG and select Wake.
- Use   to set the time for the 1st Comfort level.
- Use   to set the temperature in °C.
- You should now repeat for the Leave, Return & Sleep levels.
- Press Day to select the next day. In 5/2 day mode the thermostat will highlight “Sat Sun” prompting you to program the temperature levels for the weekend. In 7 day mode, the thermostat will highlight Tuesday.
- When complete, press Done to Store and Exit.

Locking the Keypad

The thermostat has a keylock facility. To enable this press the bottom right corner of the display and hold for 10 seconds.

When activated, you will see .
To cancel, repeat the steps above.

Temperature Override

Using the   keys allows you to adjust the set temperature. When you press either of these keys, you will see the word SET and the desired temperature. Press Done to accept.

Note: You should note that this new temperature is maintained only until the next programmed comfort level. At this time, the thermostat will revert back to the programmed levels.

Temperature Hold

The Temperature Hold function is ideal for parties or when you will be going out for a number of hours. It allows you to hold a temperature for a desired period.

- Press HOLD.
- The zone selected is underlined, you can select a different zone by pressing Zone 1 or Zone 2.
- Set the desired Hold time and temperature.
- Press Done.
- To cancel, repeat the steps above and reduce the time to 00.00.

Holiday

The Holiday function reduces the set temperature in your home to the frost temperature setting. The thermostat will maintain this temperature for the duration of the holiday and will then automatically return to the program mode on your return.

Assume you program a holiday on Monday for 1 day, the holiday will start immediately, but the thermostat will count the next day (Tuesday) as the holiday. The thermostat will then revert back to its program at Midnight Tuesday.

- Press HOLIDAY.
- Enter the duration of your holiday.
- Press Done.
- To cancel a Holiday, reduce the Holiday time to 00 days.

The Holiday function works independently for each zone.

Heat On / Off

Frost Protect Mode: Pressing the Off button once will place the thermostat in frost protect mode. In this mode, the thermostat will display the frost icon and will only turn the heating on should the room temperature drop below the set frost temperature (see pages 17-22). Should the heating be turned on whilst in frost mode, the flame symbol will be displayed. To cancel the frost protect mode, press the On button.

Thermostat Off: To turn the thermostat off completely, press and hold the Off button. The display and heating output will be turned off. To turn the thermostat back on, press the On button.

Clean Screen

Pressing Clean Screen will disable all buttons, allowing you 15 seconds to wipe the screen clean.

Factory Reset

When the thermostat is on, press and hold the SCREEN button for 10 seconds and when you see all the icons appear, press the DONE button. The screen will go blank - the thermostat has been reset back to the factory defaults. Press the power button to turn the thermostat back on.

THE FOLLOWING SETTINGS ARE OPTIONAL AND IN MOST CASES NEED NOT BE ADJUSTED

Optional Features Explained

Feature 01 – Temperature Format: This function allows you to select between °C or °F.

Feature 02 - Switching Differential: This function allows you to increase the switching differential of the thermostat. The default is 1°C which means the thermostat will switch the heating on 0.5°C below the set temperature and will turn it off 0.5°C above the set temperature. With a 2°C differential, the heating will switch on 1.5°C below the set temperature and will switch off 0.5°C above the set temperature.

Feature 03 - Frost Protect: You can set whether the thermostat will maintain the frost temperature when the thermostat display is turned off. As a default, this is enabled.

Feature 04 – Frost Protect Temperature: This is the temperature maintained when the thermostat is in frost mode. The range is 07-17°C. The default is 12°C and is suitable for almost all applications.

Feature 05 – Output Delay: To prevent rapid switching, an output delay can be entered. This can be set from 00-15 minutes. The default is 00 which means there is no delay.

Feature 06 – Communication Address: This setting is used when you have connected your thermostat to a network system. Each thermostat on the network must have a unique communication address. This can be set from 01-32.

Feature 07 – Temperature Up/Down Limit: This function allows you to limit the use of the up and down temperature arrow keys. This limit is also applicable when the thermostat is locked and so allows you to give others limited control over the heating system.





Feature 08 – Optimum Start: Optimum start will bring the heating on early if needed, so the house is warm when you wake up. This means you don't need to allow any extra heat up time when programming the comfort levels. The thermostat will automatically learn the required heat up time and will adjust itself, if required, throughout the year.

Feature 09 – Rate Of Change: This is the number of minutes the thermostat has calculated it takes to raise your building 1°C. The thermostat will continue to learn the heat up time of your home and will adjust this setting to suit.

Feature 10 – 5/2 Day 7 Day Programmable: This function allows you to switch between 5/2 day or 7 day programming. 5/2 day means you can program 4 comfort levels for the weekday and 4 different levels for the weekend. 7 day programming allows you to program 4 temperature levels for each day of the week.

Adjusting the Optional Settings

To adjust the settings, follow these steps:

- With the thermostat turned on, press PROG.
- Press SETUP.
- Use the   at the top of the screen to select the feature number (shown on pages 21-22).
- As this thermostat operates two zones, you should select zone one or zone two to setup the parameters for that zone.
- Use the   in the centre to adjust the setting.
- Press Done to accept and Store.

(NB: If you don't see the zone select buttons, it means the setting is a global setting and the setting will be applied to both zones)


Feature Table

Feature	Description	Setting
01	°C / °F	Temperature Format
02	Switching Differential	01=1°C 02=2°C 3=3°C 1°C = Default
03	Frost Protect	00 = Disabled 01=Enabled (01=Default)
04	Frost Temp	07-17°C (12=Default)
05	Output Delay	Enter value 00-15 minutes (00=Default)
06	Comms #	Enter number 01-32 Ensure each zone has a seperate comms number
07	Temp Limit	00 - 10°C

Feature Table (continued)

Feature	Description	Setting
08	Optimum Start (Preheat)	00=Disabled (Default) 01=01hr 02=02hr 03=03hr
09	Rate of Change	For information only
10	5/2 Day 7 Day	00 Default 01

JGSTAT2/TS/V3

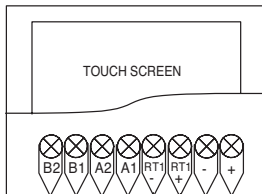

ZONE 1 AND ZONE 2
OUTPUTS ARE VOLT
FREE SWITCHES
RATED AT 230V AC
3AMPS

NB REMOTE PROBE
CONTROLS ZONE 2

RECOMMENDATIONS

MAX CABLE SIZE 1.5mm
BACK BOX DEPTH 35MM

Support Tel: 01254 870303